 





SALE

Date	Time	Swipe card, or key in card number and press [ENTER].
Swipe Customer Card		
Card Type	Sale	Key expiration date in MMY format. Press [ENTER].
Expiration Date	MMYY	
Card Type	Sale	Imprint card and press [ENTER].
Take Imprint of Card		
Enter Last 4 No. of Customer Card		Key last 4 digits of card number and press [ENTER].
Card Type	Sale	Key in cashier # and Enter Cashier Number press [ENTER].
Card Type	Sale	Key in CVV2 code from back of card. Press [ENTER].
CVV2: 0-Not Present		Select appropriate code. Press [ENTER].
2-ILLEGIBL 9-ABSNT		
Card Type	Sale	Key in base amount and Base Amount \$ 0.00 press [ENTER].
Card Type	Sale	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Total Correct?	\$0.00 Yes or No	Press [ENTER] if correct. Press [CLEAR] if incorrect.
Card Type	Sale	Key in address and Enter Address press [ENTER].
Card Type	Sale	Key in ZIP Code and ZIP Code press [ENTER].
Enter Invoice Number		Key in invoice number and press [ENTER].
Card Type	Sale	Approval Code displays. Approval XXXXXX Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.



AUTH ONLY

Date	Time	Press [AUTH ONLY].
Swipe Customer Card		
Card Type	Authorize	Swipe card, or key in card number and press [ENTER].
Swipe Customer Card		
Card Type	Authorize	Key expiration date in MMY format. Press [ENTER].
Expiration Date	MMYY	
Enter Last 4 No. of Customer Card		Key last 4 digits of card number and press [ENTER].
Card Type	Authorize	Key in cashier # and Enter Cashier Number press [ENTER].
Card Type	Authorize	Key in CVV2 code from back of card. Press [ENTER].
CVV2: 0-Not Present		Select appropriate code. Press [ENTER].
2-ILLEGIBL 9-ABSNT		
Card Type	Authorize	Key in base amount and Base Amount \$ 0.00 press [ENTER].
Card Type	Authorize	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Card Type	Authorize	Press [ENTER] if correct. Total Correct? \$\$ Press [CLEAR] if incorrect.
Card Type	Authorize	Key in address and Enter Address press [ENTER].
Card Type	Authorize	Key in ZIP Code and ZIP Code press [ENTER].
Enter Invoice Number		Key in invoice number and press [ENTER].
Card Type	Authorize	Approval Code displays. Approval XXXXXX Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

 

REPRINT

Date	Time	Press [REPRINT].
Swipe Customer Card		
Reprint Invoice		Key in invoice to reprint Enter Invoice Number and press [ENTER].
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

FORCE/OFFLINE SALE		
Date	Time	Press [OFFLINE] or Swipe Customer Card [FORCE].
	Force	Swipe card, or key in card number and press [ENTER].
Card Type	Force	Key expiration date in MMYX Expiration Date MMYX
Enter Last 4 No. of Customer Card		Key last 4 digits of card number and press [ENTER].
Card Type	Force	Key in cashier # and Enter Cashier Number press [ENTER].
Card Type	Force	Key in base amount and Base Amount \$ 0.00 press [ENTER].
Card Type	Force	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Card Type	Force	Press [ENTER] if correct. Total Correct? \$\$ Press [CLEAR] if incorrect.
Enter Invoice Number		Key in invoice number and press [ENTER].
Card Type	Force	Key in approval code; Enter Approval Code press [ENTER].
Card Type	Force	Approval Code displays. Transaction Accepted Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

CLOSE TAB		
Date	Time	Press [FUNCTION], [20] Swipe Customer Card [ENTER], [2]; [ENTER].
Enter Invoice Number		Key in invoice of tab to close and press [ENTER].
Card Type	Close Tab	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] to cancel.
Total	\$0.00	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] to cancel.
Base Amount	\$0.00	Press [ENTER] if correct. Connect? Yes or No or key in new base amount.
Base Amount	\$ 0.00	Key in base amount and New Amount \$ 0.00 press [ENTER].
Tip Amount	\$0.00	Press [ENTER] if correct. Connect? Yes or No or key in new tip amount.
Tip Amount	\$ 0.00	Key in tip amount and New Amount \$ 0.00 press [ENTER].
Total	\$0.00	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] if incorrect.
Transaction Accepted		Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.
Card Type	Close Tab	Approval Code displays. Approval XXXXXX

OPEN TAB		
Date	Time	Press [FUNCTION], [20], Swipe Customer Card [ENTER], [1]; [ENTER].
	Open Tab	Swipe card, or key in card number and press [ENTER].
Card Type	Open Tab	Key expiration date in MMYX Expiration Date MMYX
Enter Last 4 No. of Customer Card		Key last 4 digits of card number and press [ENTER].
Card Type	Open Tab	Key in cashier # and Enter Cashier Number press [ENTER].
Card Type	Open Tab	Key in base amount and Base Amount \$ 0.00 press [ENTER].
Card Type	Open Tab	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Card Type	Open Tab	Press [ENTER] if correct. Total Correct? \$\$ Press [CLEAR] if incorrect.
Enter Invoice Number		Key in invoice number and press [ENTER].
Card Type	Open Tab	Approval Code displays. Approval XXXXXX Receipt prints.

ADJUST		
Date	Time	Press [ADJUST]. Swipe Customer Card
Enter Cashier Number		Key in cashier # and press [ENTER].
Enter Invoice Number		Key in invoice to adjust and press [ENTER].
Base Amount	\$ 0.00	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Total	\$0.00	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] to cancel.
Base Amount	\$0.00	Press [ENTER] if correct. Connect? Yes or No or key in new base amount.
Base Amount	\$ 0.00	Key in base amount and New Amount \$ 0.00 press [ENTER].
Tip Amount	\$0.00	Press [ENTER] if correct. Connect? Yes or No or key in new tip amount.
Tip Amount	\$ 0.00	Key in tip amount and New Amount \$ 0.00 press [ENTER].
Total	\$0.00	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] if incorrect.
Transaction Accepted		Receipt prints.
Enter Invoice Number		Key in next invoice to adjust; press [ENTER]. Or, Press [CLEAR] for idle prompt.

Shaded sections are optional features.

REFUND		
Date	Time	Press [REFUND]. Swipe Customer Card
	Refund	Swipe card, or key in card number and press [ENTER].
Card Type	Refund	Key expiration date in MMYX Expiration Date MMYX
Enter Last 4 No. of Customer Card		Key last 4 digits of card number and press [ENTER].
Card Type	Refund	Key in cashier # and Enter Cashier Number press [ENTER].
Card Type	Refund	Key in amount and Amount \$ 0.00 press [ENTER].
Enter Invoice Number		Key in invoice number and press [ENTER].
Card Type	Refund	Approval Code displays. Transaction Accepted Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

EBT SALE		
Date	Time	Press [FUNCTION], [45], Swipe Customer Card and [ENTER].
	EBT	Swipe card, or key in card number and press [ENTER].
1=Foodstamp		Choose correct option and press [ENTER].
2=Cash Benefits		
EBT	EBT	Key in cashier # and Enter Cashier Number press [ENTER].
EBT	EBT	Key in sale amount and Sale Amount \$ 0.00 press [ENTER].
EBT	EBT	Key in ref number and Enter Ref Number press [ENTER].
Waiting for PIN		Customer keys PIN.
EBT	EBT	Receipt prints.
Approval		
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

EBT REFUND		
Date	Time	Press [FUNCTION], [46], Swipe Customer Card and [ENTER].
	EBT Ref	Swipe card, or key in card number and press [ENTER].
EBT	EBT Ref	Key in cashier # and Enter Cashier Number press [ENTER].
EBT	EBT Ref	Key in sale amount and Amount \$ 0.00 press [ENTER].
Waiting for PIN		Customer keys PIN.
EBT	EBT Ref	Receipt prints.
Approval		
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

EBT PRIOR SALE		
Date	Time	Press [FUNCTION], [44], Swipe Customer Card and [ENTER].
	Prior EBT	Swipe card, or key in card number and press [ENTER].
EBT	Prior EBT	Imprint card and press Take Imprint of Card [ENTER].
EBT	Prior EBT	Key in cashier # and Enter Cashier Number press [ENTER].
EBT	Prior EBT	Key in base amount and Base Amount \$ 0.00 press [ENTER].
EBT	Prior EBT	Key in ref number and Enter Approval Code press [ENTER].
EBT	Prior EBT	Key in voucher number and Enter Voucher # press [ENTER].
EBT	Prior EBT	Receipt prints. Approval
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

EBT BALANCE INQUIRY		
Date	Time	Press [BALANCEINQUIRY]. Swipe Customer Card
	Bal Inq	Swipe card, or key in card number and press [ENTER].
1=Foodstamp		Choose correct option and press [ENTER].
2=Cash Benefits		
Waiting for PIN		Customer keys PIN.
	EBT	Receipt prints.
Approval		

DEBIT		
Date	Time	Press [DEBIT]. Swipe Customer Card
	Debit	Swipe debit card.
Debit	SAL+CSH	Key in cashier # and Enter Cashier Number press [ENTER].
Debit	SAL+CSH	Key in sale amount and Sale Amount \$ 0.00 press [ENTER].
Debit	SAL+CSH	Key in tip amount and Tip Amount \$ 0.00 press [ENTER].
Debit	SAL+CSH	Key in cash amount and Cash Amount \$ 0.00 press [ENTER].
Total	\$0.00	Press [ENTER] if correct. Connect? Yes or No Press [CLEAR] if incorrect.
Enter Invoice Number		Key in invoice number and press [ENTER].
Waiting for PIN		Customer keys PIN.
Debit	SAL+CSH	Approval Code displays. Approval XXXXXX Receipt prints.
Print Second Receipt Correct?	Yes or No	Press [ENTER] to print. Press [CLEAR] to cancel.

Shaded sections are optional features.

VOID

Date Time Press [VOID].
 Swipe Customer Card

VOID Key in password.
 Enter Password

Enter Invoice Number Key in invoice to void
 and press [ENTER].

<INV> \$0.00 Press [ENTER] if correct.
 Correct? Yes or No Press [CLEAR] to cancel.

Print Second Receipt Press [ENTER] to print.
 Correct? Yes or No Press [CLEAR] to cancel.

DEBIT REFUND

Date Time Press [DEBIT] and then
 Swipe Customer Card press [REFUND].

Debit Ref Swipe debit card.
 Swipe Customer Card

Debit Debit Ref Key in cashier # and
 Enter Cashier Number press [ENTER].

Debit Debit Ref Key in amount and
 Amount \$ 0.00 press [ENTER].

Enter Invoice Number Key in invoice number
 and press [ENTER].

Waiting for PIN Customer keys PIN.

Debit Debit Ref Approval Code displays.
 Approval XXXXXX Receipt prints.

Print Second Receipt Press [ENTER] to print.
 Correct? Yes or No Press [CLEAR] to cancel.

AVS RESPONSE CODES

CODE	DESCRIPTION
A	Address matches, ZIP Code does not.
E	Error - Transaction ineligible for AVS or edit error found. (Visa only.)
N	Neither address nor ZIP Code match.
R	Retry - Issuer's system unavailable or timed out.
S	AVS not supported by issuer.
U	Address information unavailable, or issuer does not support AVS.
W	Whole - 9-digit ZIP Code matches, address does not. (MC and Discover only.)
X	Exact - Match on address and 9-digit ZIP Code. (MC only.)
Y	Yes - Exact match on address and ZIP Code.
Z	ZIP Code matches, address does not.

SETTLEMENT

Date Time Press [SETTLEMENT].
 Swipe Customer Card

Settle Key in password.
 Enter Password

Scanning Batch No action while processing.
 Please Wait

Sales Totals \$0.00 Press [ENTER] if correct.
 Correct? Yes or No Press [CLEAR] to cancel.

Refund Totals \$0.00 Press [ENTER] if correct.
 Correct? Yes or No Press [CLEAR] to cancel.

Settle No action while processing.
 Batch Transfer, Wait

Response Settlement prints.
 OK XXX XXX XXXX

CASHIER REPORT

Date Time Press [REPORTS].
 Swipe Customer Card

2=CASHR 4=SUMMR Press [2].
 3=AUDIT 5=0 TABS

1=DETAIL 3=UNADJST Press number for the
 2=SUMMR report you need.

Enter Cashier Number Key in cashier # and
 press [ENTER].

Scanning Batch No action while processing.
 Please Wait Report prints.

REPORTS

Date Time Press [REPORTS].
 Swipe Customer Card

2=CASHR 4=SUMMR Press number for the
 3=AUDIT 5=0 TABS report you need.

Scanning Batch No action while processing.
 Please Wait Report prints.

LOG ON/OFF/ADD CASHIER

Date Time Press [FUNCTION] and
 Swipe Customer Card then [77]. Press [ENTER].

Signon/off Key appropriate cashier
 Enter Cashier Number number.

Signon/off Press [ENTER] to complete.
 Sign-on/off? Y or N Press [CLEAR] to abort.

Transaction Accepted No action while processing.

Signon/off Key more cashiers. Or,
 Enter Cashier Number press [CLEAR] to abort.

